


# Installation Instructions

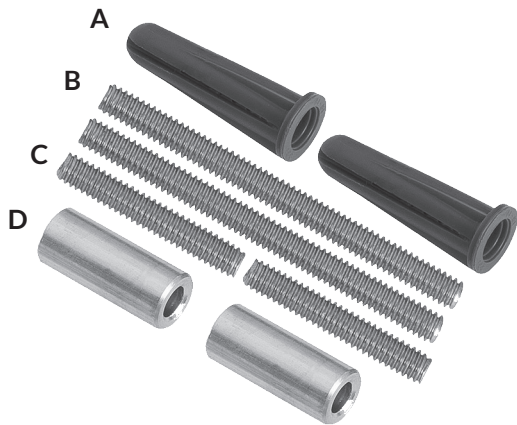


## Parts Included

- A. (2) anchors
- B. (2) long threaded rods
- C. (2) short threaded rods
- D. (2) spacers
- E. Letters or numbers ordered (not pictured)


## Tools Required

- + Drill with appropriate drill bit
- + Tape
- + Templates (**print from website at: [montaguemetal.com/templates/](http://montaguemetal.com/templates/)**)
- + Level

### Vertical mount



### Horizontal mount

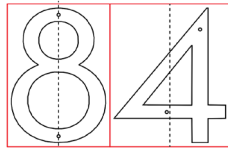

### Printing Tip:

To print the correct number/letter template, print the image using "Letter (8.5 x10 in)" paper size and look for an option "Scale" set it to 100% and click the "Print" button to create your output.

## Step 1.

Space your numbers or letters using the red box on the downloaded templates. Once the red edges are lined up you will have 1/2" of spacing in between each number or letter. Use tape to secure house number templates together.

## Step 3.

For a floating number/letter appearance, slide spacers over the threaded rod in the back. For a flat mount, omit spacers. Optional: Apply a thin layer of epoxy or other adhesive to the end of the exposed studs before mounting.

## Step 2.

Tape template at desired location. Use a level to align template. Drill holes according to template. Drill hole size should be 1/4" if using masonry anchors. 3/16" if you are not using masonry anchors.

## Step 4.

Firmly press the house number or letter rods into the previously drilled holes. Note: Gently tapping with a hammer over a piece of wood may be necessary to fully seat the number.